Getting Started with the Motion® CL910

Model FWS-001

Log on

1. Press the power button at the top of the left side of the CL910 Tablet PC.
2. Tap to display the on-screen keyboard then tap your user name and password.

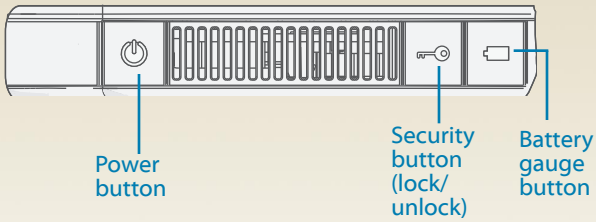

Locking and unlocking

To lock and unlock your tablet, press the Security button on the left side of the tablet. It's equivalent to using Ctrl+Alt+Delete.

Windows Taskbar

The taskbar at the bottom of your screen displays the applications that come with your CL910 Tablet PC.

- **Motion Dashboard**—Motion application for changing tablet-related settings.
- **Motion QuickNav**—An application that provides an interface for digitizer pen and text input, email launching, and using the cameras

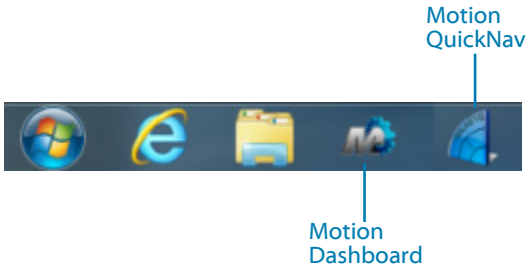

Use touch with your finger or pen

With the CL910 touchscreen display, you can use your finger or a digitizer pen to select and enter text. Touch works like a mouse: Tap to select and double-tap as you would double-click a mouse. Tap to select an application and double-tap to open it.

Note To open a right-click menu, press your finger on the display until the menu opens or press and hold the pen's function button.

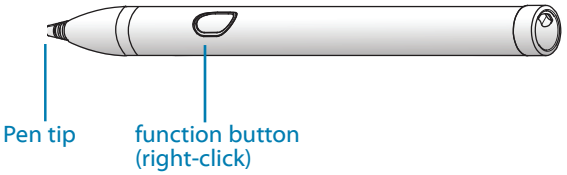

Motion Dashboard

Tap the Dashboard icon to open the Motion Dashboard application. Use the Motion Dashboard to change common tablet settings.

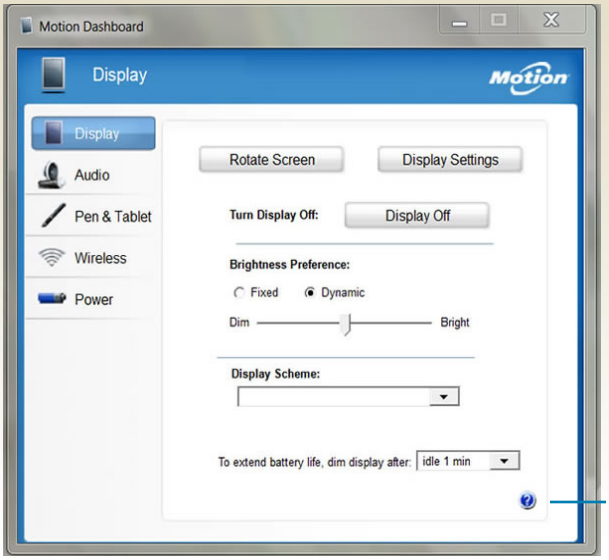

Motion Dashboard

You can change many settings from the Motion Dashboard:

Tap	To
Display	Rotate the screen
	Change the screen resolution
	Dim the display after a set period of time
	Set up an external display with **Display Scheme**
Audio	Adjust speaker and microphone volume
	Suppress background noise
Pen & Tablet	Adjust sensitivity of flicks and gestures
	Adjust touch for left-handed use
	Start the handwriting recognition program
	Enable swiping, dragging, and two-finger pinching
	Set touch to detect only your pen and not your finger or to detect your finger and not the pen

Pen and Tablet tips

- Many users like to set touch to **Auto mode**. Tap **Touch Settings,** then under **Digitizer Options**, **Input mode**, tap **Auto mode**.
- We recommend you tune touch when you get your tablet. Tap **Touch Settings,** then under **Digitizer Options**, **Touch tuning**, tap **Start**.

Wireless	Enable and disable Wi-Fi®, Bluetooth®, and Mobile Broadband
	Choose to have wireless enabled or disabled when the system starts up
Power	Dim the display to save power
	Change the power switch to hibernate or shut the tablet down instead of sleep

Set up wireless

You should set up your wireless connections if they aren't available already. You can connect to:

- Wi-Fi (802.11)
- Bluetooth
- Mobile Broadband (WWAN) with GPS (if installed)

Step 1. Enable wireless from Motion Dashboard

1. Tap the Dashboard icon.
2. **Select Wireless**.
3. Select the checkboxes next to the wireless networks you want to use:
   - **Enable Bluetooth Internal Wireless**
   - **Enable 802.11 Internal Wireless**
   - **Enable Mobile Broadband with GPS***

   * If this is not listed on the Wireless page, your CL910 is not configured with a mobile broadband module.

Step 2. Set up 802.11 Wi-Fi

1. From the notification area, select the wireless icon.
2. Select your wireless network from the list of networks.

Step 3. Set up Mobile Broadband with GPS (optional)

If your CL910 came with the optional Mobile Broadband module, you can connect to any high-speed cellular network worldwide. With the Mobile Broadband module and a data plan from a mobile network provider, you can access the Internet. Also, the module has GPS capabilities that work with your preferred GPS application.

Note: Before you can connect to a mobile broadband network, you must have an active account with a cellular network carrier. Then you set up the mobile broadband module with your account information as follows.

To set up mobile broadband:

1. Start the **Motion Connection Manager**. From the Start menu, select **All Programs > Motion Computing > MotionCM**.
2. Tap the help icon and follow the instructions provided in the topic *Setting up mobile broadband*.

To use GPS:

- From the notification area, tap the mobile broadband icon then tap **Start GPS**.

Step 4. Set up Bluetooth

The CL910 has a built-in Bluetooth adapter to connect to other Bluetooth-enabled devices.

To add a Bluetooth device:

1. From the notification area, tap the Bluetooth icon and select **Add a Device**.
2. Make sure the device is discoverable according to the Bluetooth device manufacturer's instructions.
3. Select the desired Bluetooth device from the list of devices (within the range of about 10 m or 33 ft).
4. Follow the on-screen instructions.

Tip To make the CL910 visible to other devices, tap the **Bluetooth** icon then select **Open settings**. Under the **Options** tab, select **Allow Bluetooth devices to connect to this computer**.

Using the cameras

Your CL910 comes equipped with a front-facing web camera and rear-facing documentation camera. You can have video chats or capture still images with the cameras.

To take a photograph:

1. From Windows taskbar, select the QuickNav icon.
   The QuickNav keyboard appears at the bottom of the screen.

2. Select the toolbar icon to open the QuickNav toolbar.
3. Tap the camera icon to open the camera window.
4. Frame the subject of your photo in the camera window and tap the shutter icon to snap your photo.
5. You can continue to snap photos and they will be saved automatically.
6. To view saved photos, tap the folder icon then tap the camera folder icon. To return to the camera, tap the folder icon again.
7. To hide the QuickNav toolbar, tap the QuickNav icon in the notification area.
8. To close QuickNav, tap and hold the QuickNav icon in the notification area and select **Exit**.

For more information on using the photo, video, or web camera, see the *User's Guide*.

Checking battery power

When you're running on battery, you can check the remaining battery power. Press the battery gauge button on the left side of the CL910 and status lights illuminate on the front of the tablet.

Five lights indicate a full charge; one to two lights indicate that the battery is low and requires charging.

When the tablet is plugged in, the battery gauge button lights up.

Green indicates that the battery is fully charged.
Amber means that the battery is charging.

Battery tips

If you want to conserve battery power, consider these tips:

- Stop unnecessary background applications and processes.
- When not in use, turn off wireless adapters using the Motion Dashboard Wireless page.
- Set the brightness of the display to automatically dim after a select number of minutes of inactivity using the Motion Dashboard Display page.
- When using mobile broadband, reduce how often the CL910 updates email and other Internet applications to once every half-hour or longer.
- Disable mobile broadband where you know a signal is unavailable.
- Condition your battery once a month. To condition it, run the tablet on battery power until the battery's charge level drops below 20 percent (one status light).

For more power tips, see Motion Computing Tips and Tricks.

Enter text with the Input Panel

To enter text on the tablet, use the Tablet PC Input Panel, which consists of an on-screen keyboard and writing pad. Here's the Input Panel open to the writing pad:

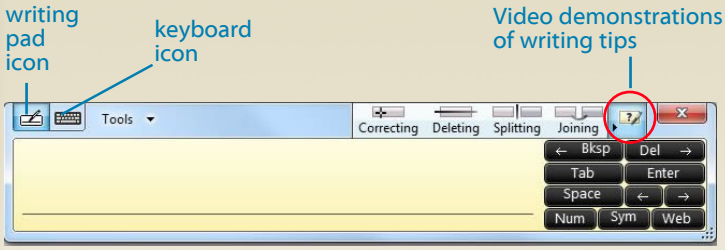

Tablet PC Input Panel Writing Pad

Tip The video demonstrations at the top of the Input Panel show how to perform writing shortcuts. To hide the video tips, tap the button on the right.

Tap the keyboard icon to open the Input Panel on-screen keyboard:

Tip You can resize the Input Panel. Drag the handle at the bottom right.

To open the Input Panel, either:

- Tap where you want to enter text, such as in a text box or a field of a form, then tap the input icon.

- Tap the tab on the left edge of the touchscreen display to expand the Input Panel.

To write numbers quickly, use the number pad.

To open the number pad:

- Tap the **Num** key at the bottom of the writing pad.

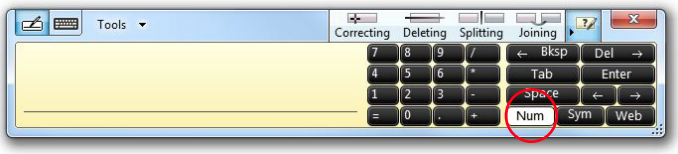

You can use the **Home**, **Delete**, **Print Screen,** and other special keys with the expanded keyboard.

To open the expanded keyboard:

- Tap the **Tools** key and choose **Show expanded keyboard**.

General tips

- Store the digitizer pen in the pen drawer when you're not using it.
- When attaching the pen tether, loop one end of the tether through the pen first, then loop the other end through the tether attach point on the tablet.
- Only use the CL910 pen or your finger on the display surface.
- Clean fingerprints and marks from the display surface with a soft cloth. Don't spray liquids directly on the display.
- If you need to use a cleaning solution, we maintain a list of tested products on our website.
- To locate the serial number of your CL910, open the port door on the left side and the label is in the SD card slot.

Learn more

For detailed information about using your tablet:

- Open the *User's Guide*. From the Start menu, select **All Programs > Motion Computing > Motion User Guide**. This is a link to the list of our guides on our website.
- Tap the help icon when using Motion Dashboard or Motion Connection Manager.
- Check out our Quick Start Online Training for the CL910 videos on our web site.

Follow us on Facebook:
http://www.facebook.com/MotionComputing

Motion Computing and Motion are registered trademarks of Motion Computing, Inc. in the United States and other countries. All other trademarks are properties of their respective owners. Copyright © 2012 Motion Computing, Inc. All rights reserved.
PN 024-02-0307-A00